
SPM-50M


OPEN CELL PROCESSING

- PPE (eye protection, skin protection, respirator)
- 2 Did you flush? All lines including relief lines must be clear of previous material.


Do not recirculate previous material into new drum.

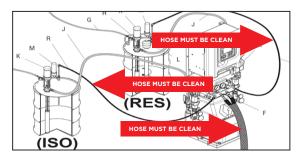

3 Drum Temperature: What is starting drum temperature? (See processing guide per product being used)
Note: Actual temperature is 5 to 7 degrees hotter in drum than actual reading.

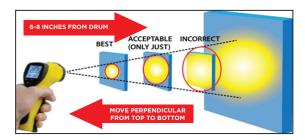


- 4 Note Lot Numbers: Reference both A and B.
- 5 If using supplementary drum heat (blankets) set temperatures to maintain warmth in drums.
- 6 Install Mixer: Begin mixing according to product processing guide. Continue mixing during entire spray process.
- Set preheater temperatures A and B to 125°F.

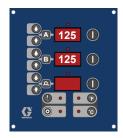

- 8 Turn heaters on and begin to recirculate (if JOG capabilities JOG J 5-7).
- Monitor drum temperatures by using thermal gun or inlet temperature gauges.

Once desired drum temperature A and B reached.


- Reduce JOG to 0.
- Set preheaters A, B, & H to desired processing parameters according to processing guide.

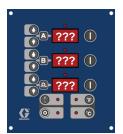

12 Set pressure to desired pressure according to processing guide.



Pressurize machine and balance pressures.

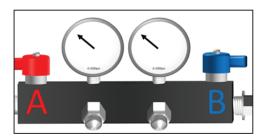

- Spray test on plastic or disposable substrate.
- 15 Check cell structure and rise.
- 16 DO NOT SPRAY ON RISING FOAM.



For additional processing details refer to the Processing Guide, or call The Spray Market Tech Support at 203-900-0005.

